


## JAMB ELANGE DOOR FLANGE TOP VIEW TENSION HOLES ON TOP DOOR ROTATING AROUND JAMB FLANGE

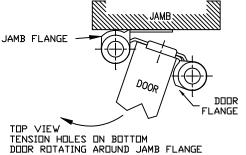

INSTALLATION INSTRUCTIONS 1) REMOVE SPRING TENSION FROM EACH BARREL BY INSERTING TENSION

ROD INTO THE TENSION ADJUSTMENT HOLE, ROTATE IN DIRECTION OF THE ARROW, AS SHOWN IN FIGURE 2 OR FIGURE 3, AND REMOVE

DOUBLE ACTING SPRING HINGE


TYPF 3029

- 2) LOCATE HINGES AS SHOWN IN FIGURE 1.
  - \* 3029 DOOR LEAF MAY BE MORTISED OR SURFACE APPLIED TO DOOR EDGE.
- 3) ALIGN CENTERLINE OF DOOR WITH CENTERLINE OF FRAME AND

FOR BEST ALIGNMENT OF DOUBLE DOORS, MOUNT HINGES ON ONE DOOR WITH TENSION ADJUSTMENT UP, AND DOWN ON THE OPPOSITE DOOR AS SHOWN IN FIGURE 1. SHIMS MAY BE NECESSARY UNDER THE EDGES OF THE

JAMB SECURE THE FRAME LEAF. FLANGE DOOR FLANGE FRAME FLANGES FOR DOOR ALIGNMENT.


## FLANGE 000p DOOR FLANGE TOP VIEW TENSION HOLES ON TOP DOOR ROTATING AROUND DOOR FLANGE

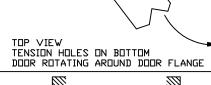


JAMB

## SPRING TENSIONING INSTRUCTIONS DO NOT EXCEED FIVE (5) HOLES TENSION

- 1) PLACE DOOR IN CLOSED POSITION. WEDGE DOOR UP FROM FLOOR UNTIL IT IS PLUMB.
- 2) INSERT TENSION ROD INTO THE TENSION ADJUSTMENT HOLE, ROTATE IN DIRECTION OF ARROW, AS SHOWN IN FIGURE 2 OR FIGURE 3. (ONLY ONE HOLE OF TENSION IS RECOMMEND FOR BOTTOM HINGES)
- 3) INSERT TENSION PIN, AND REMOVE THE TENSION ROD.
- 4) INCREASE TENSION ON THE TOP HINGES IF DOOR SAGS OR RETURN ACTION IS TOO SLOW.

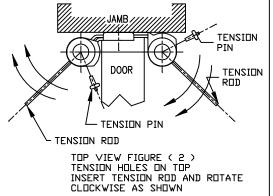


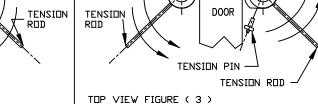


TENSION

PIN

TENSION HOLES ON BOTTOM
INSERT TENSION ROD AND ROTATE
COUNTER CLOCKWISE AS SHOWN

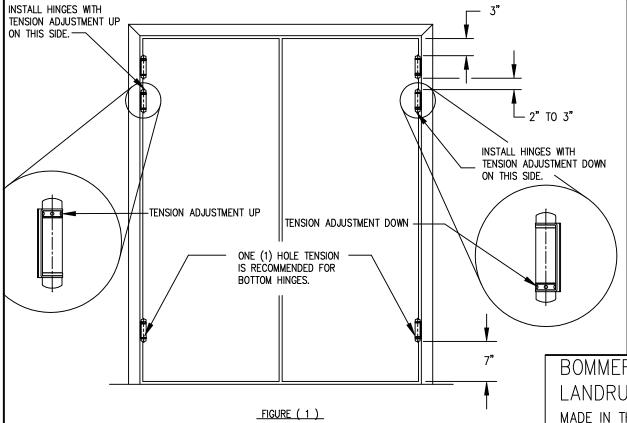

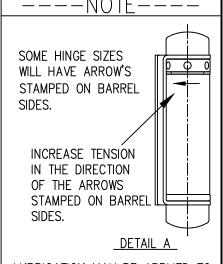

LUBRICATION MAY BE APPLIED TO HINGES. IF NEEDED.

DO NOT USE ON DOORS WITH HINGE EDGE BEVELED.

BOMMER INDUSTRIES, INC. LANDRUM, SC 29356 MADE IN THE USA

DOUBLE ACTING SPRING HINGE INSTALLATION INSTRUCTIONS 3029

DRAWN BY : STEWART JACKSON APPROVED BY:

PLOT DATE : 23 JUN 2004

DRAWING NUMBER 3029-A

THIS IS A CAD DRAWING .. DO NOT REVISE MANUALLY.

PURCHASE NO. 865573-1